

WARNING - HIGH SPEED FLOOR POLISHER

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. **IF** any safety devices or warnings have been removed, defeated, defaced or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**

 **WARNING:** Operating, servicing and maintaining this equipment can expose you to chemicals including silica crystalline from concrete and wood dust from flooring which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize your exposure, avoid breathing dust and wear the proper dust mask. For more information go to www.P65warnings.ca.gov

WARNING!

- Do not tape down or otherwise by-pass any safety devices! Always operate this equipment from the designated operator's position.
- Never operate power equipment of any kind if you are tired or if you are under the influence of alcohol, drugs, medication or any substance that could affect your ability or judgment. Be alert! If you get tired while operating this equipment, take a break. Tiredness may result in loss of control.
- This 120-volt equipment may require a grounded outlet, do not modify plug.
- Always wear eye, dust, and hearing protection.
- Don't Abuse Cord - Never carry tool by cord, or yank it to disconnect from receptacle.
- Do not use around flammable liquids or gasses, sparks could cause fire or explosion.

WARNING: You must have training in the operation of this machine before using it.

WARNING: Machines can burn flammable materials and vapors. Do not use this machine with or near fuels, grain dust, solvents, thinners or other flammables.

WARNING: Do not operate this machine unless it is completely assembled.

WARNING: Do not use this machine as a step or to move furniture. Never ride on polisher.

WARNING: When disconnecting power cord from electrical outlet, grasp the plug. Pulling it out by the cord itself can damage cord insulation and internal connection to plug. To prevent electric shock, always remove the electrical plug from the electrical outlet before doing any repairs or maintenance to this machine.

WARNING: To prevent injury, always remove the electrical plug from the electrical outlet before changing the polishing pad and before leaving the machine.

WARNING: To prevent injury, keep hands, feet and loose clothing away from the rotating pad.

WARNING: Authorized personnel must do maintenance and repairs only.

WARNING: Keep all fasteners tight. Keep adjustments according to specifications.

WARNING: Keep the electrical parts of the machine dry. For storage, keep the machine in a building.

WARNING: Always use a three-wire electrical system connected to the electrical ground. For maximum protection against electric shock, use a circuit that is protected by a ground fault circuit interrupter. Consult with your electrical contractor.

WARNING: To prevent damage to the power cord, do not let the pad, pad driver or wheels touch the power cord when the machine is running. Always lift the power cord over the machine.

WARNING: Do not let children operate the polisher. Keep bystanders at a safe distance at all times.

APPLICATIONS: This machine is for high speed polishing only.

NOTE: *The hardened steel cam release lever does not require extreme tightening to effectively hold the handle in position. Over-tightening will shorten the functional life of the lever.*

HOW TO OPERATE THE MACHINE

With the drive block and pad, in the ready-to-use position, the handle locked at the desired operating height, and the electric cable plugged in, place hands on the handle grips and squeeze the switch triggers beneath the handle grips. This activates the motor and starts the block, brush or attachment in operation.

CAUTION: *When leaving the machine unattended, disconnect the wall plug and return the handle to the "locked" upright position to prevent accidental starting.*

TO GUIDE YOUR FLOOR MACHINE

Push the polisher forward and back using the wheels to guide the machine.

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. **IF** there is any doubt as to the operation or safety of the equipment,

DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!!

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH